

MODEL:AS7412
OWNER'S MANUAL



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.


NOTE : Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit .

Features Review

- DTMF/FSK Caller ID*
- Records up to 50 calls
- Records up to 15 last dialed numbers
- On-hook pre-dialing
- Redial
- Ring Volume selection
- Privacy setting & no disturbance setting
- Clock and Call Timer
- Flash time selection
- Local area code setting
- 8 digits outside line code setting (this function is only available to PABX system)
- IP setting
- Display Contrast Adjustment
- 8 One-touch memories
- 10 Two-touch memories
- Music On Hold
- Lightning Surge Protection
- Interference free from Mobile phone signal

*Caller ID requires subscription to your local telephone company.


2 Location and function

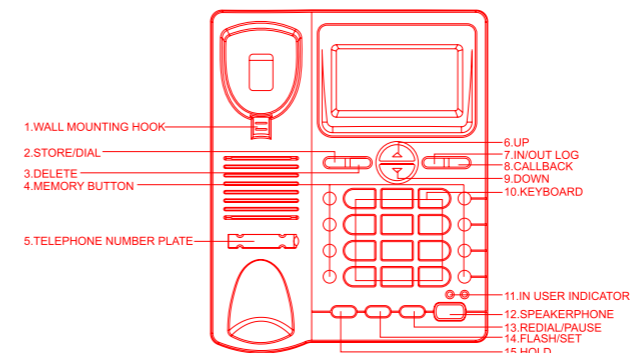

1. Wall Mounting Hook : Press down the lower part and hook will come out.
2. Store/Dial button.
3. Delete button : Delete the last digit of number you dial, incoming and outgoing call numbers.
4. Memory (M1-M8) button : Store up to 8 telephone numbers. Select from M1 to M8 and press Call Back button or press Memory button after picking up the handset.
5. Telephone number plate.
6. Up button : Review incoming calls.
7. IN/OUT LOG button : Review outgoing calls and their durations. Press this button again to move to incoming call review.
8. Call Back button : Dial out a number or a selected number from memory, incoming call or outgoing call log records.
9. Down button : Review incoming calls.
10. Keyboard.
11. In use indicator : Light up when this unit is in use.
12. Speakerphone button - (1) Allow you to call with hand free. (2) Allow you to call with headset.
13. Redial / Pause button : (1) Dial the last dialed number (need to pick up the handset or press the Speakerphone button). (2) Allow you to pause for 3.6 seconds while dialing number.

14. Flash/Set button : (1) Select 600 ms mode automatically by pressing this button after picking up the handset (see Flash time setting for other timing selections). (2) Press this button for 5 seconds to enter to Date / Time Setting.

15. Hold button : Hold the conversation with music.

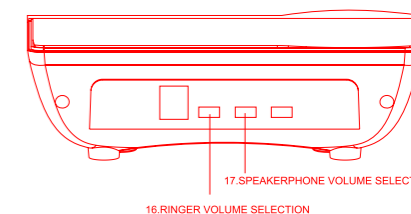

16. Ringer Volume Selection : 3 volume levels - High / Low / Off.
17. Speakerphone Volume Selection : 2 volume levels - High / Low.

3 Setting

In on-hook state, press Flash/Set button to go to main menu, the display shows SET - 12345678 on the screen.

Date / Time setting

On the main menu, enter 1 and " 1-dATE 2CL " will appear on the screen. Press 1 to go to Date/Time setting and set the item flashing. Press the Flash/Set button to confirm and then the Speakerphone button to exit.

Flash time setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms). The default is 600ms. Press Flash/Set button to confirm and then the Speakerphone button to exit.

3 Setting

Pulse / Tone selection

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 2 to go to Pulse/Tone selection and press the Up and Down button to select (Pulse/Tone). Press the Flash/Set button to confirm and the Speakerphone button to exit.

Privacy setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 3 to go to Privacy protection and press the Up and Down button to select (On/Off). Press Flash/Set button to confirm and the Speakerphone button to exit. (Select Off if this unit is connected with an internal line)

Local area code setting

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 1 to go to local area code setting and enter a local area code up to 8 digits. Press Flash/Set button to confirm and the Speakerphone button to exit.

Outside line code setting (this function is only available to PABX system)

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 2 to go to outside line code setting and enter a code up to 8 digits. Press Redial button and the Flash/Set button to confirm and the Speakerphone button to exit. The default is Off mode.

IP setting

On the main menu, enter 8 and " 1-AU 2-3-IP " will appear on the screen. Press 1 to go to IP setting and press the Up and Down button to select IP number. Press Flash/Set button to confirm and the Speakerphone button to exit. The IP number you have selected will be automatically dialed out before the call number you want to dial.

4 Operation

Pre-dial

In on-hook state, enter a telephone number. Press Call Back button to dial the telephone number. In case of wrong digit entered during the process, press Delete button to amend the digit.

Redial/Pause

Pick up the handset or press the Speakerphone button. Press the Redial/Pause button to dial the last dialed call number. Pause can be inserted between digits of a telephone number especially getting an outside line. The pause time is 4 seconds.

Music On Hold

At off-hook status, press HOLD key, Hold music will play, then put down the handset. Picking up the handset again, the Hold music will stop, enter conversation state by handset automatically. Or, pressing Speakerphone button again, the Hold ring will stop, enter conversation state by Hand-free automatically.

Review in on-hook mode

Press IN/OUT LOG button to review incoming and outgoing calls. Press Up and Down button to search.

Flash

Use this function to access services from your telephone company like call waiting or transfer call.

Dial for In/Out Log

Select a number from incoming, outgoing call log records or pre-dial a call number. Press Call Back button to dial out the selected call number.

Delete (Edit)

In pre-dialing a wrong digit entered can be edited, press Delete button to delete the last dialed digit of the call number. While reviewing incoming and outgoing call numbers, press Delete button to delete the selected call number. If pressing the Delete button for 3 seconds, all incoming and outgoing calls will be deleted.

Ringer volume selection - 3 volume levels

High/Low/Off

Speakerphone volume selection - 2 volume levels

High/Low

Two-touch memory - 10 locations (to store and dial out)

Pre-dial a number or select a number from incoming and outgoing calls. Press Store/Dial button for 3 seconds, " SAVE - " will appear on the screen. Select 0-9 and input the selected number. The call number is saved in 2 seconds. To retrieve a call number saved in two touch memory, press Store/Dial button, " Load " will appear on the screen. Select 0-9 and input the selected number, the call number you have saved will appear on the screen.

One touch memory (M1 to M8) (to store and dial out)

Pre-dial a call number or select a number from incoming and outgoing calls. Select M1-M8 and press the selected M button. Memory store is complete when " SAVE " appears on the screen. To dial the call number saved in one touch memory, select M1-M8 and press the selected M button.