



MODEL:CE6601 OWNER'S MANUAL



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden CE6601

NOTE : Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit .

Features Review

 
- FSK / DTMF Caller ID
- 50 Incoming Calls Memory
- 14 Outgoing Calls Memory
- LCD Display (12 digit)
- Ringer Volume Control (HI / LO / OFF)
- Ringer / in use indicator
- Handset Volume Control (2 levels)
- No Battery Required
- Pause Function
- Last Number Redial
- Mute Function
- Music on Hold
- Date/Time Setting
- Flash (90/95/100/120/180/300/600/1000ms)



*Caller ID requires subscription to your local telephone company.


Accessories(included)

1. Base unit
2. Handset
3. Telephone line cord
4. Handset cord
5. User manual

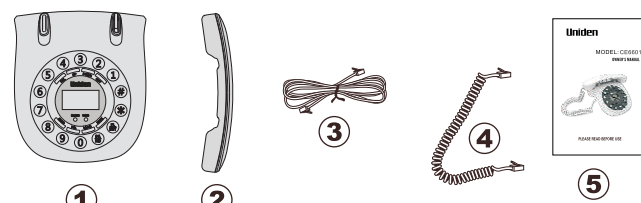


NOTE: If you find any of the parts missing, please contact your local shop where you buy this product at once.

 LCD display layout

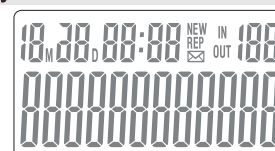

- | | |
|---------------|---|
| 1 18.28.88:88 | Date,Time |
| 2 IN | Incoming call |
| 3 OUT | Outgoing call |
| 4 NEW REP ☒ | (NEW) New call,(REP) Repeat call
(☒) Message |
| 5 8888888888 | Phone number display |

 LED layout

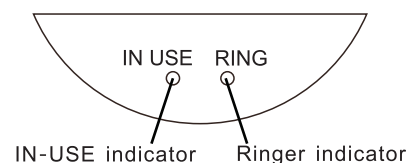

2 Setting

In on-hook state,press SET/FL button to go to main menu,the display shows [SET 12345678] on the screen.

NOTE: You may press DEL button anytime to exit the menu. If no buttons are pressed within 10 seconds, the phone automatically exit menu setting.

2 Setting

Date/Time Setting

In the main menu, enter 1 and [1-888 2-11] will appear on the screen. Press 1 to go to Date/Press 2 to go to Time setting and set the item flashing. Press the SET/FL button to confirm and then press the DEL to exit.

Flash Time/Pulse & Tone/Privacy Setting

In the main menu, enter 5 and [1-5 2-Pf 3-d] will appear on the screen. Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms). Press SET/FL button to confirm.The default is 600ms. Press DEL to continue with other settings.

Press 2 to go to Pulse/Tone selection and press the Up and Down button to select (Pulse/Tone). Press SET/FL button to confirm. Press DEL to continue with other settings.

Press 3 to go to Privacy protection and press the Up and Down button to select (On/ Off). Press SET/FL button to confirm. Press the DEL to exit.

Select Off if this unit is connected with an internal line.

Local Area Code/Outside Line Code Setting

In the main menu, enter 6 and [1-101 2-01] will appear on the screen. Press 1 to go to local area code setting and enter a local area code up to 8 digits. Press SET/FL button to confirm. Press DEL to continue with other settings.

Press 2 to go to outside line code setting and enter a code up to 8 digits. Press Redial button and then SET/FL button to confirm Press the DEL to exit. The default is Off mode.

LCD Contrast Adjustable

In the main menu, enter 7 and [1-cd con 4] will apper on the screen. Press Up and Down button to adjust contrast. Press the SET/FL button to confirm Press the DEL to exit.

3 Setup - On Hook Mode Operation

Dial numbers in phone book /call history

When viewing number records , press the back button can dial out the number selected , if you want to add 0 before the number, you need to press the back key for 3 seconds.

Incoming Caller ID List

Press Up and Down button to search.

Outgoing Scroll CID List

Press OUT button and then press Up and Down button to search.

Pre-Dial

In on-hook state,enter a telephone number. Pick up the handset and the number will dial out.

In case of wrong digit entered during the process,press DEL button to amend the digit.

Delete

The pre-dialing digits entered can be edited,press DEL button to delete the last dialed digit of the call number. While viewing incoming and outgoing call numbers, press DEL button to delete the selected call number.If pressing the DEL button for 3 seconds, all incoming and outgoing calls will be deleted.

Ringer Volume Selection

On hook state : slide the ringer switch at the back of the phone to adjust the volume for new calls.High , Low , Off ,Default

4 Setup - Off Hook Mode Operation

Music On Hold

At off - hook status, press HOLD.Music will play and you could put down the handset.

To pick up the line again, just pick up the handset again.The music will stop and conversation will be continued.

Redial/Pause

At off-hook state, before you dial the number, press [RD/P] button to dial the last dialed call number.

Press [RD/P] button after dialed or in pre-dial state to pause 4 seconds.

Mute Function

While off-hook, press [MUTE] button will prevent the other party from hearing you speak ; pressing it again will resume normal conversation.

Flash Function

On-hook status press the [FL/SET] button for the function settings button; During conversation, pressing [FL/SET] button will momentarily interrupt the telephone conversation to access telephone company services, default 600ms.

Handset volume adjustment

[VOL] key:Under the off-hook state, press this key to adjust handset volume high-low cycle, default high.

5 Troubleshooting

No Dial Tone

Check all cabling to make sure that all connections are secure and not damaged. Check the hook switch: Does it fully extend when handset is lifted from cradle?

No Display

Replace batteries. Make sure the batteries are properly installed.

No Information Is Shown After The Phone Rings

In order to receive Caller ID record, you must subscribe to the standard name and number Caller ID service available through your local telephone company. Ensure to wait until the second ring before answering.

Phone Does not ring

Make sure ringer switch is set to HI. You may have too many extension phones on your line. Unplug some extension phones. Check for a dial tone. If there is no dial tone see solutions for (No dial tone)

Other Party Cannot Hear

Make sure phone cord is securely plugged in. Make sure extension phones are on the hook at the same time you're using the phone. It is normal for the volume to drop when additional extension phones are used at the same time.

Cannot Dial Out

Make sure the T/P dialing mode is set to the type of phone service you are subscribed to.

6 Safety Instructions

Take special care to follow the safety suggestions listed below. Please do not use telephone during thunderstorm

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example. motors or fluorescent lamps).
2. Do not expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.

WARNING : To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

For sales and service in Asia
Contact: info@ustel.com.hk