

PLEASE READ BEFORE USE

### 3 Troubleshooting

**No dial tone**

Check hook switch to make sure it pops up.

**Phone doesn't ring**

Make sure RINGER switch is set to ( NO )  
You might have too many phones on one line.

**Feedback when dialing in PULSE mode**

This is normal. Power fluctuates with phone outpulsing.

**Can't be heard by other party**

Make sure phone cord is securely plugged in.  
Make sure other phones aren't off the hook at the same time you're using the phone. It is normal for the volume to drop when additional phones are used at the same time.

### 4 Safety Instructions

- To keep your phone working and looking good, follow these guidelines;
- Avoid pulling near heating appliances and devices that generate electrical noise ( for example, motors and fluorescent lamps )
  - DO NOT expose to direct sunlight or moisture.
  - Never use a strong cleaning agent or abrasive powder because this will damage the finish.
  - Retain the original package in case you need to ship it at a later date.

## 1 Getting Started

**Welcome**

Thank you for purchasing a Uniden phone.

NOTE : Illustrations in this manual are used for explanation purposes.  
Some illustrations in this manual may differ from the actual unit .

**Accessories ( included )**

- 1. Base unit
- 2. Handset
- 3. Telephone line cord
- 4. Handset cord
- 5. User manual



## 2 Instructions

**Receiving A Phone Call**

1. Be sure the RINGER switch is set to the ( ) position.
2. When the phone rings, lift the handset and begin your conversation.
3. Slide the RINGER switch to the ( ) position when you do not want to be interrupted by the phone ringing.

**Ringer Volume**

You may control the ringer volume lever with the ringer switch.

- = High
- = Low

## 2 Instructions

**Placing A Phone Call**


1. Lift the handset and wait for a dial tone.
2. Dial the telephone number you wish to call.

**Flash Button**

Press the FLASH button instead of using the hook switch to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company, select the appropriate flash timing (on handset, 600ms, 300ms, 100ms).

**Redial Button**

- This unit redials up to 32 digits. To automatically redial the last number you called:
1. Pick up the handset to get a dial tone.
  2. Press redial.

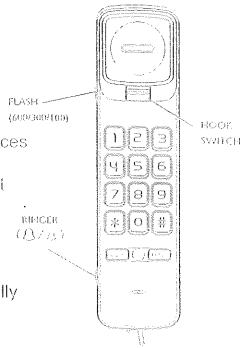

## 5 WARRANTY CARD

**18.COM Electronics Pte Ltd.**  
**WARRANTY CARD**

Name: \_\_\_\_\_

Contact No. Tel: \_\_\_\_\_

Model: \_\_\_\_\_

Date Of Purchase: \_\_\_\_\_

Serial No: \_\_\_\_\_

Dealer's Stamp: \_\_\_\_\_

Service Centre:  
Monday- Friday Opening Hours  
9:30am - 12:30pm, 2:00pm - 5:00pm  
Tel: 6278 8274

**CUSTOMER'S COPY : DO NOT MAIL THIS**

1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3. This Warranty is invalid if the product has been modified, altered and /or repaired by persons other than technician of our company or mishandled by customer.
4. This warranty is applicable to Singapore only.
5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6. Customers are requested to collect repaired unit within two months from date of submission. Units not collected after 6 months will be disposed off by the company.

18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtch Building,  
#04-01, Singapore 575625

## 1 入門指南


### 歡迎

非常感謝您選購Uniden產品。

備注:此說明書中插圖僅供示意,與實物可能有差異。

### 配件清單(包含)

1. 底座
2. 手柄
3. 電話直線
4. 曲線
5. 說明書

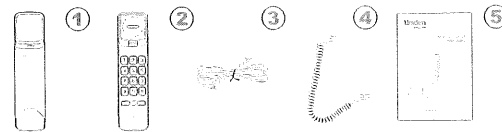

備注:如發現配件缺失,請聯繫當地購買商。

## 2 操作說明

### 接聽電話

1. 當有來電時,電話鈴聲響起。(如您設定鈴聲為  $\Delta$  - 大聲)
2. 拿起聽筒並開始您的對話。
3. 如您不想被來電鈴聲騷擾,您可將鈴聲開關轉動致  $\Delta$  (小聲)

### 鈴聲音量

有2組鈴聲音量可供選擇

- $\Delta$  = 大聲
- $\Delta$  = 小聲

## 2 操作說明

### 撥打電話


1. 拿起聽筒,聽到撥號音。
2. 撥打你想致電的電話號碼。

### 暫切按鈕

如果您有申請來電等候服務,當在通話期間有第二通電話打進來時,您可以按一次暫切鍵接聽等候的來電;再按暫切鍵一次回到原本的通話。  
【如在香港使用,暫切時間切換的設置(在手機)請設定為(600ms)】

### 重撥按鈕

- 重撥號碼可多達32個位。如需要自動重撥您最後打出一個號碼:
1. 拿起聽筒到撥號音。
  2. 按重撥鍵。

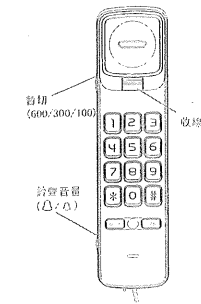

## 3 故障排除

### 無撥號音

檢查收線制是否正常彈出。

### 無來電鈴聲

檢查鈴聲音量是否設定為  $\Delta$  - 大聲,確保電話線是否正確已插妥或你可能有太多的電話共用一條電話線。

### 聽不到對方說話

確保電話線是否正確已插妥,確保沒有其他電話加入一同使用。因為這樣是會降低聽筒的音量。

## 4 安全提示

特別注意及遵循下列安全的建議。請勿在雷雨天氣下使用電話。

### 安裝環境

1. 避免擺放在供暖設備及會產生噪音的電器附近。(例如,馬達和螢光燈)
2. 請勿暴露在陽光直射或潮濕的環境下。
3. 請勿在雷雨天氣下安裝電話。
4. 請用軟布清潔電話機。
5. 請勿使用腐蝕性的清潔劑或研磨粉,以避免造成外殼損傷。

注意:為了防止火災或觸電的危險,請勿將本產品暴露在雨中或潮濕環境中。

\*\*\*說明書以英文為準\*\*\*

For sales and service in Asia  
Contact: info@ustel.com.hk

## 5 WARRANTY CARD/保修卡

ustelecom | 美國通訊有限公司  
PRODUCTS - WARRANTY CARD  
產品保養證

姓名  
Name: \_\_\_\_\_

電話  
Tel: \_\_\_\_\_

型號  
Model: \_\_\_\_\_

零售商  
Dealer: \_\_\_\_\_

購買日期  
Date of Purchase: \_\_\_\_\_

機身編號  
Serial No.: \_\_\_\_\_

### 辦公時間

星期一至五(公眾假期休息)  
上午十時至下午十二時;下午二時至五時

### Office Hours

Mon - Fri (Except for Public Holidays)  
10:00am - 12:00am; 2:00pm - 5:00pm

### 維修中心 SERVICE CENTRE

香港葵興大連排道33號宏達工業中心3樓307室  
Unit 307, Vanta Industrial Centre, 33 Tai Lin Pai Road, Kwai Hing, Hong Kong  
TEL: (852) 2185 6283

### 保養條款

1. 此保養證有效期為購買當日起計12個月。
2. 此保養證只適用於原本購買產品之顧客及不可轉讓。
3. 保養服務只限於保養期內,請出示保養證,發票正本及全套產品一併交回。客戶須負責將產品送往本公司的費用。
4. 零件及配件(火牛、電源線及電池)之保養期為購買後90天,包括對電池的蓄電能量低於額定功率的80%以下及電池洩漏這兩種情況。
5. 保養證將不包括由下列情況所導致的損壞:(a)產品曾經改變,修改及非由本公司修理過;(b)正常磨損;(c)不當裝配、使用、誤用、意外或疏忽;(d)接觸水、雨、沙、塵埃、汗水、太過潮濕或接近熱源;(e)使用其他品牌的配件。
6. 此保養證只在香港有效。
7. 由通知之日期起2個月內沒有領回已維修機件,公司有權自行處理有關機件,逾期失機,恕不負責。
8. 本公司有權隨時修訂保養條款,而無須先行通知客戶。

### 保養說明

CUSTOMER'S COPY  
用戶存根/不需寄回

此保養證只適用於香港  
For Hong Kong Only

### Warranty Conditions

1. This warranty commences on the date of original purchase and expires 12 months from that date.
2. This warranty extends only to the first consumer purchaser and is not transferable.
3. Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.
4. The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.
5. The warranty does not cover defects or damage result from (a) modification, alteration or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt; extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories.
6. The warranty is valid in Hong Kong only.
7. Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company.
8. The warranty conditions are subject to change by the company without giving prior notice to customer.