



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.

NOTE : Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit .


Features Review

- Large alphanumeric display
- Call Waiting Caller ID*
- Works without battery
- Speaker Phone
- 10 direct memory keys
- 10 two-touch memories
- 25 last number redial
- 80 Caller ID* log
- 99 Phonebook Memory
- Flash Time (100/300/600/1000ms)
- Mute function
- Tone / Pulse dialing

*Caller ID requires subscription to your local telephone company.


Accessories (included)

1. Base unit
2. Handset
3. Telephone line cord
4. Handset cord
5. User manual
6. Support

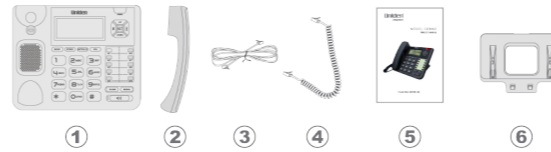

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product at once.

LCD display layout

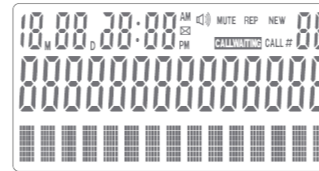

- | | | |
|---|----------------------|-----------------------|
| 1 | 10:00 10:00 AM | Date, time |
| 2 | CALL WAITING | Function display area |
| 3 | 1234 | New CID |
| 4 | 0000000000000000 | Phone number display |
| 5 | ■■■■■■■■■■■■■■■■■■■■ | Name display area |

2 Setting

Setting date and time:

- Press on **SET** key / **UP** or **DOWN** select **DATE / TIME / SET** / **UP** or **DOWN** to enter Month, Day, Hour and Minute / **SET** / **FLASH**.

Setting local area code:

- Press on **SET** key / **UP** or **DOWN** select **LOCAL AREA CODE** / **SET** / **0...9** / to enter a local area code / **SET** / **FLASH**.

Setting long distance country code:

- Press on **SET** key / **UP** or **DOWN** select **LONG DIST CODE** / **SET** / **0...9** to enter a long distance country code / **SET** / **FLASH**.

Set language and flash time to operate correctly on your network

- Press on **SET** key / **UP** or **DOWN** **SELECT LANGUAGE** / **SET** / **UP** or **DOWN** to select language desire (ENGLISH / FRANCAIS / ESPANOL / POLSKI / ΕΛΛΗΝΙΚΑ / PORTUGUES / БЪЛГАРСКИ / CESKY), default is English / **SET** / **FLASH**.
- Press on **SET** key / **UP** or **DOWN** **FLASH TIME** / **SET** / **UP** or **DOWN** to select flash time **FLASH 100ms** / **FLASH 300ms** / **FLASH 600ms** or **FLASH 1000ms** / **SET** / **FLASH**.

Setting tone or pulse:

- Press on **SET** key / **UP** or **DOWN** **SET TONE / PULSE** / **SET** / **UP** or **DOWN** to select **TONE DIAL** or **PULSE DIAL** / **SET** / **FLASH**.

Ringer Volume Level

- You may select ringer volume level on high / low / off

Flash

- During conversation,pressing Flash button will momentarily interrupt the telephone conversation to access telephone company services.

3 Using The Phone

Receive and end a call

- /
- / /
- /
- / / /

Make a call

- or either before or after dialing your number or dial number /
- From redial list:
 1. **REDIAL** / or
 2. or / **REDIAL**
- From call log list*:
 1. **UP** or **DOWN** to select the caller number / or
 2. **UP** or **DOWN** to select the caller number / **0...9** to add number prior to the select number / or
- From diect memories:
 1. **M** to select memory location from **M1 -- M10** or **BOOK** + **0...9** or **DIAL** + **0...9** / or
 2. or / **M** to select memory location from **M1 -- M10** or **BOOK** + **0...9** or **DIAL** + **0...9**

Mute the microphone

In off-hook state,user can press the **MUTE / LCD** button to access mute function. When **CONTRAST / MUTE** is on, the **CONTRAST / MUTE** indicator will show on the screen. Press the **MUTE / LCD** button to exit mute function and resume normal conversation. In on-hook state, user can press the **MUTE / LCD** button to select the **LCD Contrast** (**1--5** choice, default is 3).

Delete caller ID number

- Delete a Caller ID number: **UP** or **DOWN** to select the number / **DEL**
- Delete all Caller ID numbers: **UP** or **DOWN** to select the number / long press **DEL** to confirm **DELETE ALL?** / **DEL**.

3 Using The Phone

Store number:

- Store a telephone number: **STORE** / **0...9** to select memory location or **M** to select **M1 -- M10** / **STORE** / **0...9** to input number/ **STORE** / **0...9** to input name / **STORE** / **FLASH**.
- Store an incoming call number: **UP** or **DOWN** to select the number / **STORE** / **0...9** to select memory location, or **M** to select **M1 -- M10** / **STORE** to confirm number selecting / **0...9** to input name/ **STORE** / **FLASH**.
- Store an outgoing number: / **REDIAL** to select the number / **STORE** / **0...9** to select memory location, or **M** to select **M1 -- M10** / **STORE** to confirm number storing / **0...9** to input name / **STORE** / **FLASH**.

Review and dial back an outgoing number:

- Review an outgoing number: / **REDIAL**
- Dial back an outgoing number: / **REDIAL** / or

Delete an outgoing number:

- Delete an outgoing number: / **REDIAL** / **DEL**.
- Delete all outgoing numbers: / **REDIAL** / long press **DEL** toselect **DELETE ALL?** / **DEL**.

Store number to BOOK

- Store a telephone number: **BOOK** / **UP** or **DOWN** to select **ADD** / **BOOK** / **0...9** to input name / **BOOK** / **0...9** to input number / **BOOK** / **FLASH**.
- Store an incoming call number: **UP** or **DOWN** to select the number / **BOOK** / **0...9** to input name / **BOOK** to confirm number selecting / **BOOK** / **FLASH**.
- Store an outgoing number: / **REDIAL** to select the number / **BOOK** / **0...9** to input name / **BOOK** to confirm number storing / **BOOK** / **FLASH**.

4 Troubleshooting

No dial tone

- Check all cabling to make sure that all connections are secure and not damaged .
- Ensure the telephone line cord is securely connected to the modular jack .
- Connect another phone to the same modular jack .If it does not work , the problem might be your wiring or local service .
- Use another telephone line .

Incoming voice too low or none at all

- Check and adjust volume control setting .

No Caller ID

- Make sure you have subscribed to the Caller ID service from your local telephone Company

5 Safety Instructions

Take special care to follow the safety suggestions listed below . Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
2. Do NOT expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.
6. Avoid dropping the handset ,as well as other rough treatment to the phone.

Placement

1. Do not place heavy objects on top of this unit .
2. Care should be taken so that objects do not fall onto, and liquid into , the unit .Do not subject this unit to excessive smoke ,dust, mechanical vibration or shock .

WARNING : To prevent fire or shock hazard , do not expose this product to rain or any type of moisture.