\bigoplus

picking up the handset from the Charger, without pressing any buttons.

NOTE: Adjust the volume by pressing the VOL (- or +) button during a call.

Switching Between the Speakerphone, Handset, and Headset Mode

Cordless Handset

To switch to the speakerphone, press the Spk button. If the headset is plugged in, press the Talk button to switch

If the headset is not plugged in, press the Talk button to switch to the cordless handset's receiver.

To have a private, off-line conversation, use the Mute feature. The party on the other end of the line cannot hear you, but you can still hear them.

- 1. Press Mute button to activate the mute feature.
- 2. Press the Mute button again to de-activate.

Do Not Disturb

This feature is set at individual telephones to disable (silence) an incoming ring signal, intercom ring. When there is an incoming call or an intercom call, the status

- 1. When the unit is idle, press the DND/Privacy button. The last setting is displayed. 2. Use the VOL (- or +) button to select the duration. You
- may choose from 15 minutes, 30 minutes, 45 minutes, 1 hour, or 2 hours and increase the duration by 1-hour intervals up to 24 hours.
- how long the ringer will be disabled.

Use the Flash button to activate custom calling services through your local phone company.

Press the #pause button twice to insert a delay in dialing sequence when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.) Each pause counts as one digit in the dialing sequence, and is shown as "P" in the display. Redial

1. Press the Talk button, or press the Speaker button (speakerphone mode), or press the Headset button (headset mode) and the first available line will go off hook. If both lines a re available, Line 1 will be used.

Press a Line softkey to select a line.

2. Press the Redial button. The redial number list (last 3 previously dialed numbers) is shown.

NOTE: The Redial function will not operate if the number to be redialed contains more than 32 digits. If the number is longer than that, it can be store the first 32 digits only.

Reviewing the Redial Numbers

Your phone records up to three previously dialed phone numbers.

1. When the phone is idle, press the Redial button.

2. Use the VOL (- or +) button to view the last three

previously dialed numbers.

Talk, or Dial softkey to dial the phone number. NOTE: The line is automatically seized and the number is dialed accordingly.

Storing a Redial Record in Phone Book

2. Press the Redial button, then use the VOL (- or +)

button to scroll to the desired redial number.

3. Press the SAVE soft key.

NOTE: A name must be input otherwise the record cannot

5. Press the SAVE soft key. The desired redial number shows in the display.

7. Press the SAVE soft key to enter the VIP Tone Melody

8. Use the vol (-or +) button to scroll to select the melody, then press the select soft key to save.

Transferring a Call to Another Extension

1. Press XFER Soft key when the phone is in Talk mode.

The current call is put on hold.

3. The unit will intercom ring the selected handset or base.

Wait until the selected handset or base answers the intercom call and have a conversation and then hang up to finish the

answered within 30 seconds, the call is transferred back to the original unit and then automatically picks up the call again.

Uniden

visit our website

Model: AT470HS

Printed in China

Version 1.0 06/2018

Compatibility.

Hearing Aid Compatibility

This telephone system meets FCC standards for Hearing Aid

This equipment complies with FCC RF radiation exposure

may not ensure compliance with FCC RF exposure guidelines.

Information for DECT Product

(1880MHz to 1900MHz)

(RF Output: ≤ 250 mW EIRP

DECT 1.8 Ghz.

CAUTION:

FCC RF Radiation Exposure Statement

www.ustel.com.hk

AT470HS User's Guide

DECT 1.8GHz Accessory Handset



PLEASE READ BEFORE USE

Installation

Introduction

goes out.

Parts Checklist

Digital Security System

Belt Clip

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.

Battery

Compartment

Cover

AT470HS used with AT4701 2-line system only!

IMPORTANT: Because cordless phones operate on

Make sure your package includes the following items:

electricity, you should have at least one phone in your

home that isn't cordless, in case the power in your home

adaptor

Handset

Handset battery pack

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues move the cordless telephone farther away from these appliances.

Certain other communications devices may also use the 1.8 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.8 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

Important Installation Guidelines

- Avoid sources of noise and heat, such as motors. fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm. • Never install telephone jacks in wet locations unless the
- jack is specifically designed for wet locations. Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Wall Mounting Additional Instruction:

Wall mount installation is allowable in AT470HS. The wall mount holes are located on the back of the base unit and no extra wall mount pedestal is needed. Simply slip the wall mounting holes on the back of the base unit over the wall plate posts (not included) and slide the unit down into place. Use ONLY UL approved wall plate.

WARNING:


Distributor: US Telecom Ltd


info@ustel.com.hk

www.ustel.com.hk

Please use wall plate that can sustain at least 5kg.

limits set forth for an uncont rolled environment. This Please ensure the wall plate has appropriate and rigid mounting. equipment should be installed and operated with a minimum distance of 20 centimeters between the base unit and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. For body worn operation, this cordless handset has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories

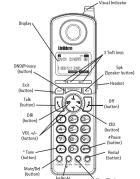

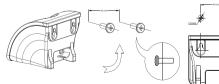

Handset Layout

to your selection. The default setting is Off. 3. Press SELECT soft key to save your selection.

From the Phone Settings Menu:

Installing the Handset Battery

is separate from the handset.

PRESS DOWN FIRMLY

4. Insert the battery pack.

ing the cover down into position.

performance is compromised.

floor mount position.

Class (Classe) 2 Power source

Programming the Phone

Programming Functions

return to standby screen

program the following items:

Phone Settings

Auto Answer.

Registration.

Auto ANS Intercom

2nd Call Alert, and

Handset Name

Talk/Spk/L1/L2 button

Auto Answer

Registration

Standby Screen

three soft keys.

handset.

NOTE: You must connect the handset battery before use.

use only the Nickel-metal Hydride (Ni-MH)

battery model T-T104 (GP, 2.4V, 550mAh),

2. Locate the battery compartment on the back of the

3. Plug the battery pack cord into the jack inside the

is keyed and can be inserted only one way.

1. Locate battery which is packaged inside a plastic bag and

NOTE: To ensure proper battery installation, the connector

5. Close the battery compartment by placing the handset

6. Plug the power supply cord into the power jack on the

7. Place the handset in the charging cradle. The charge

back cover slightly higher than the handset and then slid-

back of the charger and the other end into the electrical

indicator illuminates, verifying the battery is charging.

8. Allow the phone to charge for 14 hours prior to first use.

CAUTION: To reduce risk of personal injury, fire, or

listed in the user's guide. This power adaptor is

The handset displays the handset name and number, date,

time, the number of new calls and battery status and the

NOTE: The soft keys will change according to the status of the unit.

The system uses a menu structure to give you access to all of

the built-in features. You may program the following items

NOTE: During programming, you may press the BACK soft

key (left) at any time to exit the sub-menu and return to

the main menu, or press Exit key to exit programming and

NOTE: If no key is pressed for 30 seconds, the handset will

2. Press the Menu button on handset to go to the main menu.

automatically exit programming and return to standby

1. Make sure your phone is **OFF** (not in Talk mode).

3. Press VOL (- or +) button to scroll to *Phone Settings*.

4. Press SELECT soft key (right) to confirm and you may

This option allows you to pick up the handset from the

Charger to answer an incoming call without pressing the

When it is set to Off, this function is disabled in the handset.

2. Press SELECT soft key. Use the VOL (- or +) button to sc roll

1. Press the VOL (- or +) button to sc roll to Auto Answer.

in main menu: Phone Settings, Display Settings, Sound

Settings, Answering System and Restore Settings.

intended to be correctly orientated in a vertical or

damage use only the T-T014 (charger) power adaptor

If you don't properly charge the phone, battery

BATTERY

BLACK WIRE

which is compatible with this unit.

CAUTION: To reduce the risk of fire or personal injury,

Auto ANS Intercom If it is set to On, the handset will auto answer the intercom

call when it receives an intercom call. From the Phone Settings Menu:

1. Press the VOL (- or +) button to sc roll to Auto ANS Intercom. 2. Press SELECT soft key. Use the VOL (- or +) button to scroll

to your selection. The default setting is Off. 3. Press SELECT soft key to save your selection.

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE!

During the registration process, keep the handset near the base. Up to 10 cordless handsets can be registered to one

once a handset is deregistered, that handset's telephone features cannot be used until the handset is re-registered.

1. After the battery is installed, "Press REG to initiate

mode and "Registering..." shows in the display.

4. Please wait for several seconds. If the registration is

5. If the registration has failed (i.e. times out), the handset

shows "Registration Failed!", and then returns to the idle

WARNING: It is not recommended that a handset be

deregistered unless absolutely necessary because

2. Press the REG soft key on the handset, and the handset's

3. Press and hold the PAGE button on the base unit until a

been sound is heard. The base unit will enter registration

successful, the handset shows "Registration complete" and

display shows "PRESS BASE UNIT PAGE BUTTON UNTIL BEEP".

registration" shows in the display.

emits a confirmation tone.

Remove Handset

mode. The error tone will be emitted.

De-registration cancels registration. During the

de-registration process, keep the handset near the base.

From the Sound Settings Menu:

From the Sound Settings Menu:

The default setting is VOL 3.

From the Sound Settings Menu:

2. Press SELECT soft key.

2. Press SELECT soft key.

Ring VOL

Key Tones

On or Off.

Restore Settings

display.

original default settings.

Telephone Operation

line for you.

(from the handset)

cordless handset.

your mouth.

receive talk mode.

will be dialed out.

Answering a Call

mode,

For cordless handset:

-OR-

-OR-

4. When finished, press END button.

receiver mode.

Pre-dialing

head or over your ear.

the first available line.

From the Restore Setting Menu:

1. Press the Menu button on the handset.

1. Press the VOL (- or +) button to scroll to Ring Tone.

the VOL (- or+) button to scroll to your selection.

There are 5 volume levels and OFF for your selection. The

1. Press the VOL (- or +) button to scroll to Ring VOL.

3. Use the the VOL (- or+) button to scroll to L1 or L2, and

use the VOL (- or+) button to scroll to your selection.

4. Press SELECT soft key to save your selection.

Ring volume can be set individually for each line.

4. Press SELECT soft key to save your selection.

3. Press SELECT soft key to save your selection.

1. Press the VOL (- or +) button to scroll to Key Tones.

2. Press SELECT soft key. Use the VOL (- or +) button to select

The feature allows you to reset some menu settings to the

2. Press the VOL (- or +) button to scroll to Restore Settings.

3. Press SELECT soft key. "LOAD TO DEFAULT?" shows in the

4. Press YES soft key to let unit reset to default setting; The

1. Press the Talk button, the unit will pick the first available

1. Press the Speaker button to activate the speakerphone on

Press the Line 1 or Line 2 soft key to select a specific line,

2. Press the Speaker button to switch to speakerphone mode.

Making Calls with the Optional Headset from Handset

1. Plug the headset into the Headset jack on the side of the

3. Move the microphone to approximately 2 to 3 inches from

NOTE: Although this device will accept a variety of standard

compatibility with 3rd party devices. Performance may vary

NOTE: If the headset is not connected (or if not completely

inserted into headset jack), press talk button will enter the

1. With the phone idle, manually enter the telephone

number. The telephone number shows in the display.

2. Press the Speaker button, Talk button or Line1 or Line2

softkey to take a line, and then the telephone number

1. Press the Talk button to answer the call in receiver mode,

2. Press the Spk button to answer the call in speakerphone

3. Press the corresponding LINE soft key to answer the call in

NOTE: If you have set the Auto Answer as On in the

cordless handset, you can answer the call directly by

2.5mm telephone headsets, Uniden does not guarantee

2. Adjust the headset to rest comfortably on top of your

5. Wait for a dial tone, and then dial the phone number.

4. For the cordless handset, press the Talk button.

6. Press End button (on handset) when finished.

depending on the quality of the headset.

Press Line 1 or Line 2 soft key to select a line you wanted.

5. If you do not want to reset, press the NO soft key.

Making Calls with the Cordless Handset

2. Wait for a dial tone then dial the phone number.

Making Call in the Speakerphone mode

the handset will activate the ear piece.

4. Press the End button when finished.

3. Wait for a dial tone then dial the phone number.

3. Press the End button when finished.

unit will emit a short beep and then reset automatically.

3. Use the the VOL (- or+) button to scroll to L1 or L2, and use

The default setting is Melody 1 for Line1 and Melody 2 for line 2.

From the Phone Settings Menu:

- 1. Press the VOL (- or+) button to scroll to Registration, press SELECT soft key and then use the VOL(- or+) button to scroll to Remove Handset.
- 2. Press SELECT soft key button. "Remove handset?" shows on the display.
- 3. Press the YES soft key to confirm de- registration. "Unregistering..." shows in the display and then shows "Press "REG" to

initiate registration" in the handset. NOTE: You can press the REG soft key to enter the registation mode again.

2nd Call Alert

If it is set to On, you will hear the alert tone when you are in conversation and there is an incoming call from another line. From the Phone Settings Menu:

- 1. Press the VOL (- or +) button to sc roll to 2ND Call Alert.
- 2. Press SELECT soft key. Use the VOL (- or +) button to scroll to your selection. The default setting is On.
- 3. Press SELECT soft key to save your selection.

Handset Name

From the Phone Settings Menu:

- 1. Press the VOL (- or +) button to scroll to Handset name.
- 2. Press SELECT soft key. The default name is *Handset*.
- 3. Use the touch-tone pad to enter a name (up to 11 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and p ress the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M: press the 4 key 3 times for the letter I: press the 8 key for the letter T; press the 4 key twice for the letter
- NOTE: If you make a mistake, press the DIR or CID button to move the cursor forward or backward, and then use the Mute/Del button to backspace and delete one character
- 4. Press the SAVE soft key button to save your name. You will hear a confirmation tone.

Display Settings

- 1. Make sure your phone is OFF (not in Talk mode).
- 2. Press the Menu button on handset to go to the main menu.
- 3. Press VOL (- or +) button to scroll to Display Settings.
- 4. Press SELECT soft key to confirm and you may program the following items: Language and Contrast.

Language

From the Display Settings Menu:

- 1. Press the VOL (- or +) button to scroll to Language.
- 2. Press SELECT soft kev.
- 3. Use the VOL (- or +) button to select *English*, *Francais* or Espanol. The default setting is English.
- 4. Press SELECT soft key to save your selection.

Contrast

From the Display Settings Menu: 1. Press the VOL (- or +) button to sc roll to *Contrast*.

- 2. Press SELECT soft key. There are Level 1 to Level 5 to showing the contrast strength.
- 3. Use the VOL (- or +) button to adjust the contrast. The display instantly adjusts with each press of the
- VOL (- or +) button. 4. Press SELECT soft key to save the desired contrast level.
- Sound Settings 1. Make sure your phone is OFF (not in Talk mode).
- 2. Press the Menu button on handset to go to the main menu.
- 3. Press VOL (- or +) button to scroll to Sound Settings. 4. Press SELECT soft key to confirm and you may program the following items in handset: Ring Tone, Ring VOL and

Key Tones. Ring Tone

to 8 for Line 1 and Line 2 respectively.

There are 8 tone levels for your selection. They are Melody 1

to the headset.

indicators function as normal but the phone will not ring.

- 3. Press the SELECT soft key to confirm. The display shows
- 4. To cancel, press the DND/Privacy button again.

such as call waiting or call forwarding, which are available

Inserting a Pause in the Dialing Sequence

-OR-

3. Use the VOL (- or +) button to select the number. Press the DIAL soft key to dial out the number.

3. While the preferred number is displayed, press the Spk,

1. Make sure the phone is OFF (not in Talk mode).

4. "Enter Name" shows in the display. Input a name. Please refer to section "Handset Name" for name editing method.

6. You can edit the telephone number.

2. Use VOL (- or +) to select the desired handset or base you want to transfer to, and then press the SELECT Soft key.

transfer or press Conference to have a 3 way conference call. 4. If the selected unit rejects the intercom call, or the call is not

Ringer On/Off and Ringer Volume

- 1. Make sure the phone is in idle mode.
- 2. Press the VOL (- or +) button to activate the ringer volume setting. Use the VOL(- or +) to select the direct line which you want to set and press Select softkey to confirm, then use the VOL (- or +) button to scroll to your selection. The default setting is VOL 3.
- 3. Press the SELECT soft key to save your selection and the new volume setting shows in the display. NOTE: If you choose the ringer OFF, "L1/L2 RINGER OFF" shows in the display

Speakerphone, Handset, and Headset Volume While the phone is in use, during the desired mode.

press the VOL (+ or -) buttons until you reach a comfortable listening level. The phone stores the setting after the last button pressed.

In Talk mode, press the Hold button to hold the line. "Line X ON HOLD" shows in the display, and the line icon will flash. When the line is on hold, the hold alert tone will be emitted on the base.

Press the corresponding LINE soft key to release the hold and Pick the call again.

Conference Calls

This system can support 3-way and 4-way conference calls. Join a call in progress:

1. While a call is in progress, another user can join that call by pressing the corresponding Line button on the base unit or soft key in the handset. Both parties on the original call will hear a tone to alert them someone else has joined the call.

NOTE: If the privacy feature is On for the original call, the call cannot be joined by another user.

3-way conference call by an intercom call:

- 1. During a call, press the XFER sot key and then select the desired handset or base to intercom.
- 2. The selected handset or base will emit a page tone. The user can press the Talk button on the handset or the Speaker button on the base to answer the intercom call
- 3. The originating caller can then press the CONF soft key shown on the display to establish a 3-way conference between Line and the intercom call-

3-way conference call with two lines:

- 1. During a call, press the Hold button to put the call on
- 2. Press the Line 2 soft key on the handset to get a dial tone. Dial the number, and then talk to the other person.
- 3. The originating caller can then press the CONF soft key shown on the display to establish a 3-way conference between the two lines.

4-way conference call (Line 1 + Line 2 + 2 extension):

- 1. Once the base unit or handset has both Line 1 and 2 on hold, press the Intercom button and then select the desired handset or base to inte rcom.
- 2. The selected handset or base will emit a page tone. The user can press the Talk button on the handset or the Speaker button on the base to answer the intercom call
- 3. The originating caller can then press the CONF soft key shown on the display to initiate a conference. Since Line 1 and 2 are both on hold, the user will be prompted to select Line 1, Line 2 or Both to confe rence with. The user can then use the soft keys to select the desi red option. If the Both soft key is selected, a 4-way conference is established between the originating caller, both lines and the intercom call.

Intercom Calls

Making an Intercom Call

1. Press the Int/Hold button, and all the registered handsets and the base except itself list in the log, use the VOL (- or +) key to scroll to the station you want to intercom with, and then p ress SELECT soft key to confirm.

NOTE: To abort intercom call, press the STOP soft key.

NOTE: If the receiving station does not answer within 30 seconds, the intercom call is cancelled. You will hear an error tone and "Unavailable" shows in the display.

Answering an Intercom Call

When you receive an Intercom call, the display shows the Caller's Name and Phone ID.

If you want to answer with the speakerphone, press the Speaker button. If you want to answer by headset, press the Talk button on the handset. The headset must be already

If you do not want to answer this intercom call, press the REJECT soft key.


Auto Standby

If you place the handset in the cradle while the handset is off the hook (during a call), the call is automatically disconnected.

Caller ID (CID)

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

When the unit receives an incoming call with CID information, the CID can be shown on handsets.

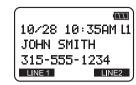

Handset Display

Receiving and Storing CID Records

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date and time; or the name, phone number, date and time. The unit can store up to 99 calls for later review. When the memory is full, a new call automatically replaces the oldest call in memory. "NEW" appears in the display for calls received that have not been reviewed. The line number for the call received is also displayed.

When reviewing the CID records, the record number is also shown to the right of the time along with the FORMAT and STORE soft keys.

If two incoming calls come in at the same time, the line1 and line2 phone numbers shows on the display separately.

Reviewing CID Records

• Press CID button, and then use VOL (- or +) button to scroll through the call records.

Saving a CID Record to Phone Book Memory

- 1. While viewing a CID record, press the STORE soft key. 2. The name shows in the display. You can edit it. After edit -
- ing, press the SAVE soft key. 3. The number will be shown. You can edit it. After editing, press the SAVE soft key.
- 4. You can select the ring melody for this phone number. Use the VOL (- or +) button to scroll to your selection, and press the SELECT soft key to save.

NOTE: If you want to change the format of the CID number and save it in the phonebook, press the FORMAT soft key to format the CID number first before pressing the STORE

NOTE: You cannot skip the name editing. If it is empty in the name field, you cannot press SAVE soft key to go to number editina.

Deleting a CID Record

To delete the record shown in the display, press the Delete button. The "DELETE?" prompt message will be shown. Press the OK soft key to confirm.

Deleting All Call Records

This feature allows you to clear all CID records at once.

- 1. While viewing a CID record, press and hold the Delete
- button. "Delete All?" shows in the display. 2. Press OK soft key to confirm. A confirm tone emit and Empty shows for 3 seconds.

Dialing Back

When reviewing CID records, you can dial back the numbers showing on the display by pressing the Talk button, or the

Call Waiting Caller ID

This feature allows you to see who is calling when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

 Press the Flash button to put the pe rson to whom you're talking with on hold and answer the incoming call. IMPORTANT: To use all the features of this unit, you must subscribe to either the standard Name/Number Caller ID Service or Caller ID with Call Waiting Service. To know who is calling while you are on the phone, you must subscribe to Caller ID with Call Waiting Service.

Phone Book Memory

You may store data in the Phone Book Directory (up to 99 memories). The Phone Book stores up to 16 characters and

The records are stored by alphabetic ascending order. Adding Phone Book Entries

- 1. Make sure the phone is OFF (not in Talk mode).
- 2. Press the DIR button.
- 3. Press the NEW soft key. "Enter Name" shows in the display. Please refer to section "Handset Name" for name editing method.
- 4. Press SAVE soft key. "Enter Number" shows in the display.
- 5. Use the touch-tone pad to input a telephone number. TIP: Press the #pause button twice to insert a pause in a number if necessary.
- 6. Press the SAVE soft key to enter *VIP tone melody*

7. Use VOL (- or +) button to sc roll to the selection and press SELECT soft key to complete.

NOTE: If "Memory full" shows in the display, you should delete one or more unnecessary records and repeat above steps to continue the call record storage.

Reviewing Phone Book Records

1. Make sure the phone is OFF (not in Talk mode).

2. Press the DIR button.

3. Press the VOL (- or +) button to scroll through the records,

-OR-Press the number keys to go to the name of the records

started with the corresponding character. 4. Then you can press Menu softkey and then use VOL(- or +) to select View and press select softkey to review the direct

Editing a Phone Book Record

- 1. When reviewing the phone book records, use the VOL (- or +) button or the number keys to scroll to the desired record.
- 2. Press Menu soft key and then use VOL(- or +) to select Edit Entry. You may now change the name, if desi red. Please refer to section "Handset Name" for name editing method.
- 3. Press the SAVE soft key to proceed to number change. You may now change the number, if desired.
- 4. Press the SAVE soft key to proceed to VIP Tone Melody selection. You may use VOL (- or +) key to scroll to the selection you desired.
- 5. Press the SELECT soft key to complete. NOTE: Press the BACK soft key to keep the previous setting (making no changes).

Copying a Phonebook Record

You can copy one phone book record or the whole phone book from the handset extension to the base. In the extension handset:

- 1. While viewing the phone book record, press the COPY soft key.
- 2. Copy Current Record or Entire Directory?" shows in the display. Press the CURR soft key to copy the current record or press the ENTIRE soft key to copy the whole phone
- 3. After copying is finished, the p rompt message "Record Copied to Base Unit!" will be shown.

Deleting a Phone Book Record

- 1. When reviewing the phone book records list, use the VOL (- or +) button or the number keys to scroll to the desired
- 2. Press the Mute/Del key on the phone to delete the record. 3. The prompt message "Delete?" is shown in the display.
- 4. Press the OK soft key to confirm the deletion.

Dialing a Phone Book Record

Dial a phone book record while in Talk mode:

- 1. Make sure the phone is ON (in Talk mode) by pressing the Talk, Spk button, or selecting a Line.
- 2. Press the DIR button to access the phone book.
- 3. Use the VOL (- or +) button or the number keys to scroll to the desired record.
- 4. Press the DIAL soft key to dial the number.

Dial a phone book record while reviewing it:

- 1. Make sure the phone is OFF (not in Talk mode).
- 2. Press the DIR button to access the phone book. 3. Use the VOL (- or +) button or the number keys to scroll to the desired record.
- 4. Press the Talk or Spk button. The number dials automatically.

Changing the Battery



CAUTION: To reduce the risk of fire or personal injury, use only the Nickel-metal Hydride (Ni-MH) battery model T-T104 (GP, 2.4V, 550mAh) which is compatible with this unit.

- 1. Make sure the telephone is OFF (not in Talk mode) before you replace battery.
- 2. Remove the battery compartment door.
- 3. Disconnect the battery plug from the jack inside the bat compartment and remove the battery pack from the handset.
- 4. Insert the new battery pack and connect the cord to the jack inside the battery compartment.
- 5. Put the battery compartment door back on.
- 6. Place handset in the base or handset cha rge cradle to charge. Allow the handset battery to properly charge (for 14 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the Nickel-metal Hydride battery listed in the User's Guide.
- Keep batteries out of the reach of children. • Remove batteries if storing over 30 days.

UNKNOWN

Display Messages

your phone.

DELETE?

DELETE ALL?

ENTER NAME

NEW CALLS

ENTER NUMBER

HANDSET NAME

UNAVAILABLE

NO LINE

EMPTY

BLOCKED

LINE IN USE

OUT OF RANGE

The following messages show the status of the phone

provides Caller ID information, or helps you set up and use

all records.

the current record.

telephone number

not been reviewed.

is an incoming call.

not connected.

in memory.

name for the handset.

Prompt asking if you want to erase

Prompt asking if you want to erase

Prompt telling you to enter a name.

Indicates call or calls which have

Prompt telling you to enter a user

want to initialize cannot work at

that moment or the function being

worked cannot continue. The system

priority function is being performed.

For example, the message playback

Indicates that the telephone line is

Display on handset while the line is

Indicates there are no CID records

Indicates handset is too far away

from the base, and the handset is

Indicates the person is calling

from a number which is blocked

Indicates incoming call is from an

area not serviced by CID or the CID

searching for the base.

information was not sent.

from transmission.

function will be stopped when there

Indicates that the function you

is busy or some other higher

Prompt telling you to enter a

Handset Sound Signals	
Signal	Meaning
A long warbling tone (with ringer on)	Signals an incoming call
Two short beeps (several times)	Page signal
One beep every 14 seconds	Low battery warning
One long beep after p ress one key	Confirm
A short warbling tone (with ringer on)	Error

Troubleshooting Guide

Telephone Solutions

No dial tone

- Check or repeat installation steps: Make sure the base power cord is connected to a working electrical outlet. Make su re the telephone line
- cord is connected to the base and the wall jack. • Connect another phone to the same jack. If it doesn't work, the problem might be your wiring or local service.
- The handset may be out of range of the base. Move closer to the base.
- Make sure the battery is properly charged (for 14 hours). Dial tone is ok, but can't dial out • Make sure the type of phone service you are subscribed to

is TONE or PULSE. Handset does not ring

- Make sure the handset ringer is set to On.
- The handset may be out of range of the base. Move closer
- You may have too many extension phones on your line. Try unplugging some extensions. • Check for a dial tone. If no dial tone is heard, see "No dial

tone". You experience static, noise, or fading in and out

- The handset may be out of range of the base. Move closer to base.
- Make sure base is not plugged into an electrical outlet with another household appliance. If necessary, relocate
- the base. • Charge the battery (for 14 hours).

Memory dialing doesn't work

- Did you follow proper dialing sequence? Unit locks up and no communication between the base and cordless handset
- Unplug the power adaptor from the electrical outlet on the back of the base. Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base and electrical outlet. Reconnect the battery and charge for 14 hours.

"Out of Range..." shows in the handset display

- Move the handset closer to the base.
- Make sure the base power cord is connected to a working electrical outlet.

Date/Time setting is restored to default setting • May be caused by power failure. Set Date/Time again.

Caller ID Solutions

No Display

• Charge the battery (for 14 hours). Or replace the

• Make sure the unit is connected to a non-switched electrical outlet. Disconnect the power adaptor from the

No Caller ID

• You must be subscribed to the standard Name/Number Caller ID service from your local telephone company to

Battery

If you experience any of the following problems, even after recharging the battery, you may need to replace the battery

To keep your unit working and looking good, follow these

- Avoid dropping the handset, as well as other rough
- · Clean the phone with a soft cloth.

base with a clean pencil eraser.

產品保養證

姓 名

Model:

零售商

購買日期

機身編號

Office Hours

維修中心 SERVICE CENTRE

Unit 307, 3/F, Vanta Industrial Centre

21-33 Tai Lin Pai Road, Kwai Hing, N.T. TEL: (852) 2185 6283

- Never use strong cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical p roducts to
- Retain the original packaging in case you need to ship the phone at a later date.

base and reconnect it.

receive CID information.

Short talk time

- Poor sound quality
- Limited range

General Product Care

- treatment to the phone.
- clean the unit. Doing so will damage the finish.
- Periodically clean the charge contacts on the handset and

Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.

 \bigoplus

- You 're too close to appliances such as microwaves, stoves, computers, etc.
- · Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

ustelecom (① 美国通讯有限公司 保養說明 PRODUCTS - WARRANTY CARD

+ 保養條款 +

此保養證只適用于香港

- 1. 此保養體有效期為購買當日起計2個月 2. 此保養體只適用於原本購買產品之網客及不可轉讓。 3. 保養服務只限於保養期內,請出示保養體,發票正本及全餐產品一併交回。客戶須負 資將產品送往本公司的費用。 4. 零件及配件(火牛、電源線及電池)之程機制為購買後90天,包括對電池的蓄電能量低
- 於關定功率的80%以下及電池澳圖這兩種情況。 保養體將不包括由下列情況所導致的損壞:(a) 產品曾經改變,修改及非由本公司修 理過;(b) 正常磨損;(c) 不當裝配,使用,誤用,意外或疏忽;(d) 接觸水、雨、沙、 塵埃、汗水、太過潮濕或接近熱源;(e) 使用其他品牌的配件。
- 此保養證只在香港有效。 由通知之日期起2個月內沒有領回已維修機件,公司有權自行處理有關機件,逾期失機, 恕不負責。 8. 本公司有權隨時修訂保養條款,而無須先行通知客戶。
- + Warranty Conditions +
- 1. This warranty commences on the date of original purchase and expires 12 months
- 1. Inis warranty commences on the date of original purchase and expires 12 months from that date.
 2. This warranty extends only to the first consumer purchaser and is not transferable.
 3. Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.
 4. The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.
 5. The warranty does not cover defects or damage result from (a) modification, alternation or repair by persons other than the authorized personnel of the company;
 (b) normal wear and lear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt; extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories.
 6. The warranty is valid in Hong Kong only.
 7. Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company, without giving prior notice to customer.

18.COM Electronics Pte Ltd.

星期一至五(公眾假期休息) 上午十時至下午十二時;下午二時至五時

Mon - Fri (Except for Public Holidays) 10:00 am -12:00 am ; 2:00 pm - 5:00 pm

WARRANTY CARD

Name: Contact No. Tel: Model: Date Of Purchase: Serial No.:

Service Centre:

Dealer's Stamp:

Monday- Friday Opening Hours 9:30am - 12:30pm, 2:00pm - 5:00pm Tel: 6278 8274

CUSTOMER'S COPY: DO NOT MAIL THIS

- 1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
- 2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges. 3. This warranty is invalid if the product has been modified, altered and / or repaired by persons other than technician of our company or
- This warranty is applicable to Singapore only.

mishandled by customer.

- 5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
- disposed off by the company.

6. Customers are requested to collect repaired unit within two months

from date of submission. Units not collected after 6 months will be

18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtech Building, #04-01, Singapore 575625