

1 入門指南

歡迎
非常感謝您選購Uniden AT8601。
備注：此說明書中插圖僅供示意，與實物可能有差異。

功能描述

- 新來電指示燈
- 免提
- 兩線功能 (聽筒及免提)
- 靜音功能 (110/300/600/1000ms)
- 鈴聲音量 (大/小/關)
- 16組重撥記錄
- 61組來電記錄

注意：本電話機有來電顯示功能，但必須向你的電訊服務商申請。

配件清單 (包含)

1. 底座
2. 手柄
3. 電話線
4. 曲線
5. 說明書

備注：如發現配件缺失，請聯繫當地購買商。

2 設置操作

LCD 顯示

1 18.38.88 88 日期、時間
2 IN 來電
3 OUT 去電
4 NEW REP 新來電、(REP)重播、(NEW) 留言信息提示
5 888888888888 號碼顯示

LED 顯示

NEW USE 新來電
IN USE 使用燈
MESSAGE 訊息燈
MUTE 靜音燈

a. 設置日期/時間

SET → SET 1 DATE → SET → UP/DOWN → SET
選擇年/月/日/時/分

3 掛機功能操作

b. 設置地區編號

SET → UP → SET 2 CODE → SET → SET
選擇地區編號

如來電顯示號碼收到的區號 (前面的數字) 與您設置的區號匹配，代號將會被過濾。(如在香港使用，您可不設置此功能)

c. 設置鬧鐘

SET → UP → SET 5 ALERT → SET → SET
選擇時:分/ON/OFF

d. 設置自動IP

SET → UP → SET 4 AUTO IP → SET → SET
選擇 "AutoIP On"

此功能只能在預撥模式使用，可能不適用在某些國家。

e. 設置鬧鐘

SET → UP → SET 5 ALERT → SET → SET
選擇時:分/ON/OFF

f. 設置閃斷時間

SET → UP → SET 6 FLASH → SET → SET
選擇閃斷時間: 110/300/600/1000ms

4 摘機功能操作

MUTE功能操作

在手柄免提正常通話狀態下，按一次 [MUTE] 鍵，此時發音被禁止發送，同時點亮 MUTE 燈 ()，再按一下此鍵，則取消 MUTE 功能，MUTE 燈滅。

自動IP

在功能表中設置自動IP開及相應自動IP號碼以後，在預撥號碼或回撥來電時，若首位號碼為 "0"，則該機會自動在號碼前加撥所設置的IP號碼。當該機設置0或全關，禁止設置自動IP號碼，已設置好的IP號碼也禁止撥出。(此功能不適用於香港)

5 安全提示

特別注意及遵循下列安全建議。請您在雷雨天氣下使用電話。

安裝環境

1. 避免雷放在供電設備及會產生聲音的電器附近。(例如，馬達和熨斗燈)
2. 請勿暴露在陽光直射或潮濕的環境下。
3. 請勿在雷雨天氣下安裝電話。
4. 請用軟布清潔電話機。
5. 請勿使用腐蝕性的清潔劑或研磨粉，以避免造成外觀損傷。

注意：為了防止火災或觸電的危險，請勿將本產品暴露在雨中或潮濕環境中。

說明書以英文為準

For sales and service in Asia
Contact: info@ustel.com.hk

6 WARRANTY CARD/保修卡

ustelecom 美國通訊有限公司
PRODUCTS - WARRANTY CARD
產品保證書

姓名: _____
電話: _____
地址: _____
Model: _____
零售商 Dealer: _____
購買日期 Date of Purchase: _____
機身編號 Serial No.: _____
辦公時間 星期一至五 (公眾假期休息)
上午十時至下午十二時; 下午二時至五時
Office Hours
Mon - Fri (Except for Public Holidays)
10:00am - 12:00am; 2:00pm - 5:00pm
維修中心 SERVICE CENTRE
香港紅磡暢通道1號中旅貨運物流中心6樓 (必須使用電梯)
6/F, China Travel (Cargo) Logistics Centre,
1 Cheong Tung Road, Hung Hom, Kln.
(Use Guest Lift Only)
TEL: (852) 2185 6283

保養條款

1. 此保證書有效期為購買日起計12個月。
2. 此保證書只適用於於原本購買產品之顧客及不可轉讓。
3. 保證書只限於保證期內，據出示保證書，發還正本及全套產品一併交回，客戶須負責將產品送返本公司的費用。
4. 零件及配件 (火牛、電源線及電池) 之保證期為購買後90天，包括對電池的實際電量低於額定功率的80%以下及電池漏液兩種情況。
5. 保證書將不包括由下列情況所導致之損壞：(a) 產品曾經改裝、修改及非由本公司修理過；(b) 正常磨損；(c) 不當裝配、使用、誤用、意外或疏忽；(d) 接觸水、雨、沙、塵埃、汗水、火過潮濕或接近熱源；(e) 使用其他品牌的配件。
6. 此保證書只在香港有效。
7. 由通知之日起2個月內沒有報回已維修物件，公司有權自行處理有關物件，逾期不報，恕不負責。
8. 本公司有權隨時修改保養條款，而無須先行通知客戶。

Warranty Conditions

1. This warranty commences on the date of original purchase and expires 12 months from that date.
2. This warranty extends only to the first consumer purchaser and is not transferable.
3. Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.
4. The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.
5. The warranty does not cover defects or damage result from (a) modification, alteration or repair by persons other than the authorized personnel of the company, (b) normal wear and tear, (c) improper installation and operation, misuse, accident, negligence, (d) contact with water, rain, sand, dirt, extreme humidity or heat, heavy perspiration, (e) the use of other brand accessories.
6. The warranty is valid in Hong Kong only.
7. Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company.
8. The warranty conditions are subject to change by the company without giving prior notice to customer.

18.COM Electronics Pte Ltd.
WARRANTY CARD

Name: _____
Contact No./Tel: _____
Model: _____
Date Of Purchase: _____
Serial No: _____
Dealer's Stamp: _____

Service Centre:
Monday-Friday Opening Hours
9:30am - 12:30pm, 2:00pm - 5:00pm
Tel: 6278 8274

CUSTOMER'S COPY : DO NOT MAIL THIS

1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3. This Warranty is invalid if the product has been modified, altered and repaired by persons other than technician of our company or mishandled by customer.
4. This warranty is applicable to Singapore only.
5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6. Customers are requested to collect repaired unit within two months from date of submission. Units not collected after 6 months will be disposed off by the company.

18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtech Building, #04-01, Singapore 575625

1 Getting Started

Welcome
Thank you for purchasing a Uniden AT8601.

NOTE: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.

Features Review

- New call indicator
- Speakerphone
- Alarm clock
- Mute (Handset + Handsfree)
- Flash (110/300/600/1000ms)
- Ringer (High/Low/Off)
- 16 Outgoing CID memory
- 61 Incoming CID memory

*Caller ID requires subscription to your local telephone company.

Accessories (included)

1. Base unit
2. Handset
3. Telephone line cord
4. Handset cord
5. User manual

LCD display layout

1 18.38.88 88 Date, Time
2 IN Incoming call
3 OUT Outgoing call
4 NEW REP 新來電、(REP)重播、(NEW) 留言信息提示
5 888888888888 Phone number display

LED layout

NEW USE 新來電
IN USE 使用燈
MESSAGE 訊息燈
MUTE 靜音燈

2 Setting

a. SETTING DATE/TIME

SET → SET 1 DATE → SET → UP/DOWN → SET
Select Year, Month, Day, Hour and Minute

b. SETTING LOCAL AREA CODE

SET → UP → SET 2 CODE → SET → SET
Select your area code
Caller ID number received that has area code (front of the number) matches with the set area code will be filtered.

c. SETTING PCODE (FOR USE BEHIND PABX SYSTEM)

UP/DOWN → SET
Select your PABX code
This feature will only work in pre-dialing mode.

d. SETTING AUTO IP (CODE TO ACCESS SPECIAL IP CALL SERVICE)

UP/DOWN → SET → INPUT CODE → SET
Enter Auto IP code
This feature will only work in pre-dialing mode and only work if you have this local service.

e. SETTING UP ALARM CLOCK TIME

SET → UP → SET 5 ALERT → SET → SET
UP/DOWN → SET
Select Hour, Minute and On/Off mode

f. SETTING FLASH TIME

UP/DOWN → SET
Select Timing - 110/300/600/1000ms

3 On Hook State

New Call Indicator

New incoming call not answered, the indicator lamp (New) will flash under on hook state. If the new incoming call already been checked, the indicator lamp will shut off. Press any key or goes off hook, the indicator lamp will also shut off.

Incoming Calls and Dial-back

Press [DOWN] button to enter incoming calls inquiry state, can check with [UP] or [DOWN] button, LCD will display the call numbers, date, time etc. Direct press [RD] button or hand free button or off hook, it can dial back the telephone number.

Press the [RD] button consecutive twice, telephone will auto add the " 0 " before the first number to dial back the long distance telephone number. If can dial back the long distance telephone number only under unlock status.

Outgoing

Press [OUT] button to enter outgoing calls inquiry state, press [OUT] button continuously to check the recently dial-out numbers and call time. If want to redial the checked numbers, press [RD] directly or press hand free button or picks up the handset.

LCD Contrast Adjustment

On hook state, press [FLASH] button to select suitable LCD brightness, 5 levels LCD adjustable.

Pre-dial

On hook state, input the dial out numbers. If enter the wrong number, it can modify with the [DEL] button. After entering all numbers, press [RD] button or hand free button or pick up the receiver to dial.

Delect button (Del)

Under Pre-dial state, the [DEL] button is for deleting the wrong input numbers. When display incoming or outgoing calls, press [DEL] button can delete that call records. Long press [DEL] can delete all call records (incoming/outgoing calls).

Hands-free VOL adjustment

Under hands-free state, press [VOL] button can adjust the volume, level (2 level)

Ringer Volume Level

You may select ringer volume level on high, low, off

Call Duration

The unit automatically record call duration when you call out or when receiving calls.

Mute Function

Under normal hand-free dialing state, press the [MUTE] button, the telephone will stop to send the voice out and the relevant lights will turn off () at the same time. Press the [MUTE] button again, it will cancel the mute function and the mute lamp will shut off.

Auto IP

After Auto IP setting in the menu, when pre-dial or dial back incoming call/outgoing call and manually dial out under the off-hook state, if the first number is " 0 ", then the telephone will add the setup IP number before dial out. When telephone is full lock or lock with " 0 ", it will can't dial out auto IP number. (This feature is not available in Hong Kong.)

5 Safety Instructions

Take special care to follow the safety suggestions listed below. Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
2. Do NOT expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.
6. Avoid dropping the handset, as well as other rough treatment to the phone.

Placement

1. Do not place heavy objects on top of this unit.
2. Care should be taken so that objects do not fall onto, and liquid into, the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

WARNING: To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.