



MODEL:AS6404 OWNER'S MANUAL



PLEASE READ BEFORE USE

Distributor:US Telecom Ltd
info@ustel.com.hk
www.ustel.com.hk

1 Getting Started

Welcome

Thank you for purchasing Uniden phone.


NOTE : Illustrations in this manual are used for explanation purposes.
Some illustrations in this manual may differ from the actual unit .

Features Review

- DTMF/FSK Caller ID*
- Up to 50 Incoming Calls
- Up to 14 Outgoing Calls
- Green backlight
- Pre Dial Function
- Speaker phone
- Last Number Redial
- Ringer Selection
- Ringer Volume Adjustable
- Flash Time(90/95/100/120/180/300/600/1000ms)
- IDD Code and PABX Dial Out Code Setting
- LCD Display Clock and Call Timer
- Contrast Adjustable
- Music On Hold
- Do Not Disturb
- Surge Protection

*Caller ID requires subscription to your local telephone company.

Location and function

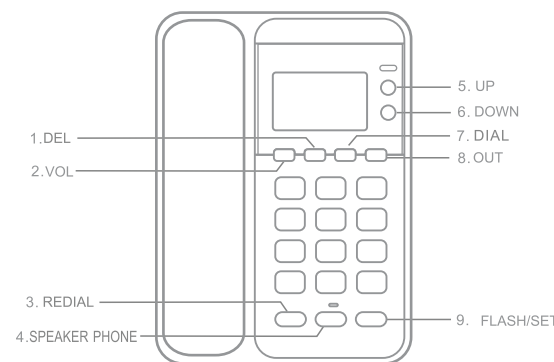

1. Delete button : Delete the last digit of number you dial,incoming and outgoing call numbers.
2. Volume button: adjust ringer, HF speaker and handset volume
3. Redial button : Dial the last dialed number (need to pick up the handset or press the speaker phone button).
4. Speaker phone button - Allow you to call with hand free.
5. Up button : Review incoming calls
6. Down button : Review incoming calls
7. Dial button : out a number or a selected incoming/outgoing call log records.
8. OUT LOG button : Review outgoing calls and their durations. Press this button again to move to incoming call review.
9. Flash/Set button : (1) Flash default 600ms,See Flash time setting for other flash timing selection
(2) In on-hook state press this button to enter main menu setting.

2 Setting

In on-hook state, press Flash/Set button to go to main menu, the display shows SET-12345678 on the screen.

Date/Time setting

On the main menu, enter 1 and " 1-DATE 2-CL " will appear on the screen. Press 1 to go to Date. Press 2 to go to Time setting and set the item flashing. Press the Flash/Set button to confirm and then the speaker phone button to exit.

Ringer selection

On the main menu, enter 2 and " r1T 2VIP 3 VOL " will appear on the screen. Enter 1 and " ring TYPE 1 " will appear on the screen. Press Up and Down button to choose the ringing you want. Press Flash/Set button to confirm and the speaker phone button to exit.

Alarm setting

On the main menu,enter 3 and " AL 1-2-3 " will appear on the screen. Enter 1 and " ALARM OFF " will appear on the screen indicating this function is off.

Enter the timing for alarm and press the Flash/Set button to confirm. Enter for the second Alarm setting on the day," DAYAL 1 OFF " will appear on the screen. Enter the timing and press the Flash/Set button to confirm. Enter 3 for the third Alarm setting on the day, " DAYAL 2 OFF " will appear on the screen.

Enter the timing and press the Flash/Set button to confirm.

To cancel the Alarm settings, press Up to Down button until you find " ALARM OFF " on the screen and press the Flash/Set button to confirm.

Do not Disturb setting

On the main menu, enter 4 and " OFF_R 00-00 " will appear on the screen. Enter the timing on the digits flashing, the first two digits are hours and the latter two are minutes.

Press the Flash/Set button to confirm. Once this setting is done, you can receive incoming call without ringing until the timing you have set has elapsed.

To cancel this setting, press the speaker phone button.

Flash time setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms). Press Flash/Set button to confirm and then the speaker phone button to exit. The default is 600ms.

2 Setting

Pulse/Tone selection

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 2 to go to Pulse/Tone selection and press the Up and Down button to select (Pulse/Tone). Press Flash/Set button to confirm and the speaker phone button to exit.

Privacy setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 3 to go to Privacy protection and press the Up and Down button to select (On/Off). Press Flash/Set button to confirm and the speaker phone button to exit. (Select Off if this unit is connected with an internal line.)

Local area code setting

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 1 to go to local area code setting and enter a local area code up to 8 digits. Press Flash/Set button to confirm and the speaker phone button to exit.

Outside line code setting (this function is only available to PABX system)

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 2 to go to outside line code setting and enter a code up to 8 digits. Press Redial button and then Flash/Set button to confirm and the speaker phone button to exit. The default is Off mode.

LCD Brightness Setting

On the main menu, enter 7 and " LCD con 4 " will appear on the screen. press " UP " or " DOWN " to setting the LCD brightness, the default is 4th level, 5 levels in total.

IP setting

On the main menu, enter 8 and " 1-AU 2-IP " will appear on the screen. Press 1 to go to IP setting and press the Up and Down button to select IP number. Press Flash/Set button to confirm the speaker phone button to exit. The IP number you have selected will be automatically dialed out before the call number you want to dial.

Dial

Select a number from incoming, outgoing call log records or pre-dial a call number. Press dial to dial out the selected call number.

Operation Pre-dial

In on-hook state, enter a telephone number. Press dial to dial the telephone number. In case of wrong digit entered during the process, press Delete button to amend the digit.

Redial/Pause

Pick up the handset or press the speaker phone button. Press the redial button to dial the last dialed call number. Pause can be inserted between digits of a telephone number especially getting an outside line. The pause time is 4 seconds.

Review in on-hook mode

Press out Log button to review incoming and outgoing calls. Press Up and button to search.

Flash

Use this function to access services from your telephone company like call waiting or transfer call.

Delete (Edit)

In pre-dialing a wrong digit entered can be edited, press Delete button to delete the last dialed digit of the call number. While reviewing incoming and outgoing call numbers, press Delete button to delete the selected call number. If pressing the Delete button for 3 seconds, all incoming and outgoing calls be deleted.

Ringer volume selection - 3 volume levels

On hook state : press VOL button to select volume, and then press set to confirm.

H-F Volume Function

In H-F state, pressing " VOL " is HF speaker volume function, 3 levels in total (the default is max. 3th level), press " VOL "button to select the speaker volume.

Handset Volume Function

In handset state,pressing "VOL" is handset volume function.3 levels in total(the default is 1th level),press "VOL" button to select the handset volume.

3 WARRANTY CARD

18.COM Electronics Pte Ltd. WARRANTY CARD

CUSTOMER'S COPY : DO NOT MAIL THIS

1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3. This Warranty is invalid if the product has been modified,altered and /or repaired by persons other than technician of our company or mishandled by customer.
4. This warranty is applicable to Singapore only.
5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6. Customers are requested to collect repaired unit within two months from date of submission.Units not collected after 6 months will be disposed off by the company.

Name: _____

Contact No.Tel: _____

Model: _____

Date Of Purchase: _____

Serial No: _____

Dealer's Stamp: _____

Service Centre:
Monday- Friday Opening Hours
9:30am - 12:30pm, 2:00pm - 5:00pm
Tel: 6278 8274

18.COM Electronics Pte Ltd, 159 Sin Ming Road,Amtech Building,
#04-01,Singapore 575625