



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.

NOTE : Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit .

Features Review

- FSK/DTMF Caller ID *
- 50 Incoming Calls Memories
- 10 Double bond memory
- 14 Outgoing Calls Memories
- Wall mountable
- Redialing
- LCD Contrast selectable
- Flash timing selectable (90/95/100/120/180/300/600/1000ms)
- Pcode
- Auto IP
- TONE/PAUSE Dial Mode

*Caller ID requires subscription to your local telephone company.

Accessories (included)

1. Handset
2. Base
3. Line Cord
4. Coil Cord
5. User Manual



①



②



③



④



⑤

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product at once.

 
LCD display layout



- 1 18:00:00:00 Date,time
- 2 18:00 Incoming call , Outgoing call
- 3 NEW REP new call, Repeat
- 4 SUN MON TUE WED THU FRI SAT Week display
- 5 0000000000000000 Phone number display

Telephone Jack Requiremnts

To use this phone,you need an **RJ11C** type modular telephone jack,which might look like the one pictured here,installed in your home.If you don't have a modular jack,call your local phone company to find out how to get one installed.



2 Istallation

NOTE : Disconnect the phone cord from the wall outlet before installing or replacing the batteries.

- Never install telephone wiring during a lightning storm
- Never touch non-insulated telephone wires or terminals,unless the telephone line has been disconnected at the network interface
- Use caution when installing or modifying telephone lines
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations
- Avoid putting the phone near heating appliances and devices that generate electrical noise(for example,motors or fluorescent lamps)
- Clean the phone with a soft cloth
- Never use a sterong cleaning agent or abrasive powder because this will damage this unit

Installing The Batteries

IMPORTANT:You will have approximately 90 seconds to replace the batteries before the memories stored in the handset are lost.Please read instructions before

2 Istallation

replacing the batteries and have the batteries ready to be inserted before hand. As a precautio,you may want to write down any stored information you do not want erased.

Your Caller ID phone uses 3 AA-size alkaline batteries for receiving and storing Caller ID records and for the numbers you use for memory dialing.

- 1.If both the straight and coiled line cords are already connected,disconnect them from the base unit.Place the handset aside.
2. Use a ballpoint pen or other tool to open the battery compartment door.
3. Insert 3 AA-size alkaline batteries(not included)as shown on the diagram inside the compartment.
4. Replace the battery compartment door.
- 5.Re-attach the line cords to the unit and check your memory locations.If installation takes longer than 90 seconds,you should re-set your memory locations.

Battery compartment



IMPORTANT:If you're not going to use the telephone for more than 30 days, remove the batteries because they can leak and damage the unit.

Battery Safety Precaution

1. Do not burn,disassemble,mutilate or puncture.Like other batteries of this type,toxic materials could be released which can injury.
2. Keep battery out of reach of children.
3. Remove battery if storing for over 30 days.

Work Without Batteries

1. Without battery, telephone can still dial out and receive calls(including incoming call number display).
2. All memory records will be lost if telephone line is disconnected for more than 90 seconds.

Installing The Phone

Choose the best location to install your telephone.Your telephone should be placed on a level surface,such as a desk or table top,or you may mount it on the wall.


Connecting The Telephone Line

- 1.Plug the coiled cord into the jack on the handset.
- 2.Plug the long straight line cord into a modular wall telephone jack.



3. Set the **RINGER** switch on the base to **ON**.
 = ON - Sound will be emitted.
 = OFF - Telephone will not ring.
4. Place the handset in the cradle.

3 Setting

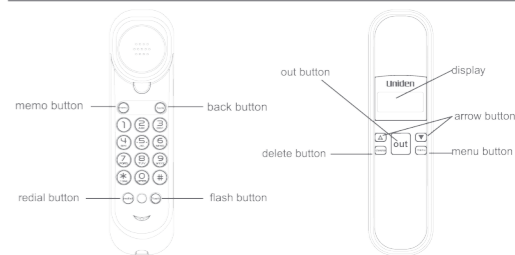

In on-hook state,press menu button to go to main menu,the display shows [SET 12345678] on the screen.

NOTE: You may press delete button anytime to exit the Set Up menu. If no buttons are pressed within 10 seconds, the phone automatically exists the Set Up menu.

3 Setting

Date/Time Setting

On the main menu,enter 1 and [1-DATE 2-[]] will appear on the screen. Press 1 to go to Date/Press 2 to go to Time setting and set the item flashing. Press the menu button to confirm.

If the user does not set the date and time, the date and time will be updated, every time a **FSK CID** message has been received.

If the user does set the date and time, the date and time will not be updated by the **CID** message.

If a **DTMF CID** message has been received, then the **CID** message will get its date and time from the system clock of the phone.

NOTE:The phone return idle mode if no key has been pressed for 10 seconds or press **delete** before the completion of the current operation, the phone will time out and return to the idle mode.

Flash Time/Pulse & Tone/Privacy Setting

On the main menu,enter 5 and [1-F 2-PF 3-d] will appear on the screen. Press 1 to go to Flash time setting and press the [▲ ▼] button to select Flash time (90/95/100/120/180/300/600/1000ms).

Press menu button to confirm.The default is 600ms.

Press **delete** to continue with other settings.

Press 2 to go to Pulse/Tone selection and press the [▲ ▼] button to select (Pulse/Tone).

Press menu button to confirm.

Press **delete** to continue with other settings.

Press 3 to go to Privacy protection and press the [▲ ▼] button to select (On/ Off). Press menu button to confirm.

Select Off if this unit is connected with an internal line.

Local Area Code/Outside Line Code Setting

On the main menu,enter 6 and [1-LC 2-dL] will appear on the screen.

Press 1 to go to local area code setting and enter a local area code up to 8 digits.

Press menu button to confirm.

Press **delete** to continue with other settings.

Press 2 to go to outside line code setting and enter a code up to 8 digits.

Press **redial** button and then menu button to confirm.

The default is Off mode.

The local area setting have call filtering function ,after set the zone number , the local area will filter out incoming area code ,only display the caller number.

LCD Contrast Adjustable

On the main menu,enter 7 and [LCD CON 4] will apper on the screen.

Press [▲ ▼] button to adjust contrast.

Press the menu button to confirm.

Automatic IP settings

Take the handle away from the base and keep hang up (press and hold the wire switch)

Press the [**menu**] button and then the press the number button [8], the screen shows [1-RU 2-IP]

Press button [1] to enter, the default mode is [RU IP OFF]

Press the [▲] button or [▼] button to select the IP number

Press the [**menu**] button to confirm.

Note: IP numbers are IP, 17909, 17908, 193, 17911, 17921, 17931, 17951,17991, 068, 96300, 96333, 196, 190, 17969, 197, OFF; the default value is OFF.(IP1, 1P2 for the manual IP setting code); (This machine hasn't done the manual IP function)

Set up automatic IP number, on the on-hook, off-hook or dial back state, if the first number is "0", will automatically add the set IP number before dialing. If re-dail the number with the first number is"0" , it will be added the set IP number. Press the delete key before dialing the number with the fist number"0" ,it will not dial IP, and direct dial out.

4 Telephone Basics

Dialing

1. Pick up the handset
2. Dial the number button as your need,call will dial out.

Redialing

If you want to call the last number you dialed again (up to 32 digits), use the redial button.

- 1.Pick up the handset.
- 2.Press the (**redial**) button.
- 3.The last number called is automatically redialed.

Incoming Caller ID List

Press (▲) and (▼) button to search.

Outgoing Scroll CID List

Press OUT button and (▲) and (▼) button to search

Reviewing CID Records

When reviewing calls,you may delete an individual call.

Keep in on-hook situation (press push switch).

1. Use the (▲) and (▼) buttons to find the call which you want to delete.
2. Press (**delete**) button,than,this number will be remove.
- 3.Put down the hanset.

Memory

Before you store a telephone number in memory,make sure the dialing mode is corrcet set for the type of service you have.The default dialing mode is tone (touch-tone),so if you have pulse (rotary) service,you must change the dialing mode.See (Setting the Dial Mode).The following buttons can be stored into any memory location: **0 - 9**

Storing Frequently Called Numbers

- 1.Pick up the handset,keep in on-hook situation (press push switch).
2. Use the handset number keys to enter the telephone number (up to 16 digits) or reviewing CID records.
3. Press the (**memo**) button for 3 seconds.Than,press number key (**0 - 9**) which you want to store.
4. Hang up the handset.

NOTE:If you make a mistake,use the **delete** button to delete wrong digits.

Changing A Stored Number

Repeat the storage sequence above.The new number replaces the old number at the memory location.

Using Flash

This feature is used to activate customer calling services available through you local phone company, such as Call Waiting.If you subscribe to any of these services,please refer to the phone company's instruction on how to use flash.To answer an incoming call while having a conversation: After you hear the (Call Waiting) tone,press and release the **flash** button. The first call is placed on hold while the second call can be answered.To return to your first call and put the second call on hold: Press and release **flash** again.The first call can continue while the second call is put on hold.

Back

When reviewing number records , press the back button can dial out the number selected , if you want to add 0 before the number, you need to press the back key for 3 seconds.

5 Troubleshooting

No Dial Tone

- Check all cabling to make sure that all connections are secure and not damaged.
- Check the hook switch: Does it fully extend when handset is lifted from cradle?

No Display

- Replace batteries.
- Make sure the batteries are properly installed.

No Information Is Shown After The Phone Rings

- In order to receive Caller ID records,you must subscribe to the standard name and number Caller ID service avaiable through your local telephone company.
- Be sure to wait until the second ring before answering.

Phone Does not ring

- Make sure ringer switch is set to HI.
- You may have too many extension phones on your line.Unplug some extension phones.
- Check for a dial tone. If there is no dial tone see solutions for (No dial tone)

5 Troubleshooting

Other Party Cannot Hear You

- Make sure phone cord is securely plugged in.
- Make sure extension phones are on the hook at the same time you're using the phone.It is normal for the volume to drop when additional extension phones are used atthe same time.

Cannot Dial Out

- Make sure the T/P dialing mode is set to the type of phone service you are subscribed to.

6 Safety Instructions

Take special care to follow the safety suggestions listed below . Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
2. Do NOT expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.
6. Avoid dropping the handset ,as well as other rough treatment to the phone.

Placement

1. Do not place heavy objects on top of this unit .
2. Care should be taken so that objects do not fall onto, and liquid into , the unit .Do not subject this unit to excessive smoke ,dust, mechanical vibration or shock .

WARNING : To prevent fire or shock hazard , do not expose this product to rain or any type of moisture.