 


Menus

The > symbol highlights a menu item.

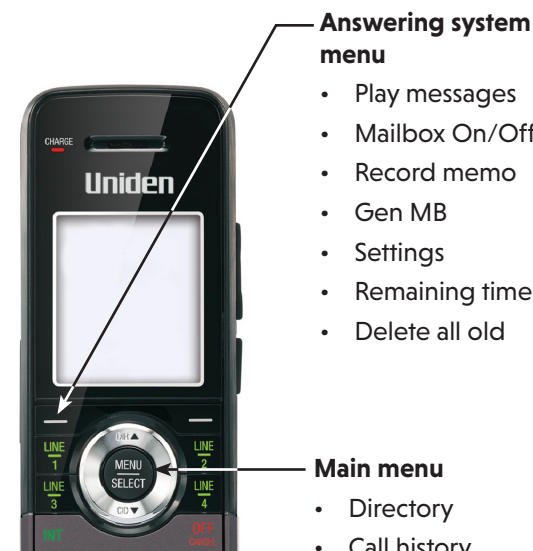

Using menus

- Press **MENU/SELECT** to show the main menu; or press **M.Box** to show the answering system menu.
- Press ▲DIR or ▼CID to scroll through menu items.
- Press **MENU/SELECT** or **Select** to select or save changes a highlighted menu item.
- Press **OFF/CANCEL** or **Back** to cancel an operation, exit the menu display or return to the idle screen.

Handset basic operation

Make a call

1. Press the desired line key (**LINE 1-LINE 4**).
2. Wait for a dial tone, then enter the telephone number. The screen displays the elapsed time as you talk (in hours, minutes and seconds).

Answer a call

Press the corresponding line key (**LINE 1-LINE 4**) or **SPEAKER**  to answer an incoming call.

End a call

Press **OFF/CANCEL** or return the handset to the charger to hang up.

Hold

While on a call, press **Hold**. The corresponding line key (**LINE 1-LINE 4**) indicator for the line on hold flashes slowly. After the call has been put on hold for more than three minutes, you hear a double beep every 30 seconds.

If you are using the speakerphone, the speakerphone turns off automatically when you press **Hold**.

To release the hold, press the corresponding line key.

Switch between lines

1. Press the desired line key (**LINE 1-LINE 4**) of another telephone line to make or answer another call. The current call is put on hold automatically.
2. To return to the first call, press the line key (**LINE 1-LINE 4**) of the original call. The second line is put on hold automatically.

Conference calls

The system can support 6-party conference with a maximum of four outside calls and two system extensions (including the initiating party).

1. Make an intercom call with an extension.
2. Make an outside call. The intercom call is automatically put on hold.

3. Press **MENU/SELECT**, and then choose **CONFERENCE** to begin the conference call.

-OR-

1. Make or answer an outside call.
2. Make or answer a call using another line, or intercom someone. The first line is automatically put on hold.
3. Press **MENU/SELECT**, and then choose **CONFERENCE** to begin the conference call.

Intercom calls

You can use the intercom feature for conversations between the handset and other system devices.

1. Press **INT** on the handset when it is idle.
2. Press ▲DIR or ▼CID to scroll to a desired extension, then press **MENU/SELECT** or **Select**.

Paging calls

1. Press **PAGE** on the handset when it is idle.
2. Press ▲DIR or ▼CID to scroll to a desired extension, then press **MENU/SELECT** or **Select**.
3. Press and hold the **PAGE** key, and then speak towards the microphone. Your voice is broadcast to the desired extension.
4. Release the **PAGE** key after speaking. The destination party can reply.

Call recording

1. During a call, press **MENU/SELECT**.
 2. Press **MENU/SELECT** or **Select** to select **Recording**. The recording starts and the screen shows **-Recording call**. Both the handset user and the far-end party hear a beep sound.
 3. The recording ends when you end the call.
- OR-**
To stop recording and continue the call, press **MENU/SELECT**, and then press **MENU/SELECT** or **Select** again.
The system saves the conversation into the private mailbox.

Message playback

You can play the messages in the private mailbox and the general mailbox. You can choose to play the new messages only or play old messages.

Listen to messages in private mailbox

1. While the handset is idle, press **M.Box**.
 2. Press **MENU/SELECT** or **Select** to choose **Play messages**.
 3. If you have only new messages or only old messages, the handset plays the messages directly.
- OR-**
If you have both new and old messages, press ▲DIR or ▼CID to choose **New messages** to play the new messages only, or **Old messages** to play old messages in the private mailbox. Press **MENU/SELECT** or **Select** to play the messages.

Listen to messages in general mailbox

1. While the handset is idle, press **M.Box**.
 2. Press ▲DIR or ▼CID to scroll to Gen MB, then press **MENU/SELECT** or **Select**.
 3. Press **MENU/SELECT** or **Select** to choose **Play messages**.
 4. If you have only new messages or only old messages, the handset plays the messages directly.
- OR-**
If you have both new and old messages, press ▲DIR or ▼CID to choose **New messages** to play the new messages only, or **Old messages** to play old messages in the general mailbox. Press **MENU/SELECT** or **Select** to play the messages.

Uniden®

 
AT480HS

4-Line
Small Business System
Handset



Quick start guide

Charger installation

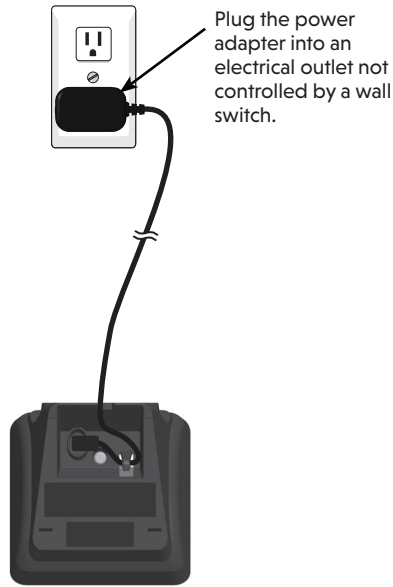

Plug the power adapter into an electrical outlet not controlled by a wall switch.

Battery installation and charging



The **CHARGE** light turns on.

Add and register a handset

You can add AT480HS handsets to the AT4801 console at any time, each new handset must be registered with the console before use.

The handsets are assigned with available extension numbers starting from 1 in ascending order (1 to 9). You can register a maximum of nine devices to the console.

Register the handset to the console

Start registration when the handset shows

1) Press MENU on Console → Registration → Register Ext. 2) Press # on this extension to register.

- On the console, press **MENU/SELECT**.
- Press **▲DIR** or **▼CID** to scroll to **Registration**, then press **MENU/SELECT** or **▶/SKIP**.
- Press **MENU/SELECT** or **▶/SKIP** to choose Register ext. The console shows **Registering...**
- On the handset, press **#**. The handset shows **Registering...**
- You hear a beep sound when the registration process is successful. The handset shows **Handset X registered.** (X represents the extension number, ranged from 1 to 9). It takes up to 60 seconds to complete the registration process.
- Press a line key (**LINE 1-LINE 4**). If you hear a dial tone, the registration was successful.

NOTE: If the registration is not successful, the console returns to the previous screen. To reset the handset, remove the handset from the charger. Wait for about two minutes, then try the registration process again.

Handset overview

Charge light

- On when the handset is charging in the charger.

Softkeys (2)

- Press to select a menu item displayed above the key.

LINE 1/LINE 2/LINE 3/LINE 4

- Press to make a call on the desired line.
- Press to answer a call.
- The indicator is on when the telephone line is in use.
- The indicator flashes slowly when the telephone line is on hold.
- The indicator flashes quickly when there is an incoming call.

DIR▲

- Press to scroll up while in menus.
- Press to show directory entries when the telephone is not in use.

MENU/SELECT

- Press to enter the menu.
- While in a menu, press to select an item or save an entry or setting.

CID▼

 
- Press to scroll down while in menus.
- Press to show the caller ID history when the telephone is not in use.

INT

- Press to make an intercom call when in idle.
- The indicator is on when the handset is on an intercom call.
- The indicator flashes slowly when an intercom call is on hold.
- The indicator flashes quickly when there is an incoming intercom call.

OFF/CANCEL

- While using menus, press to return to idle mode.
- During a call, press to hang up.

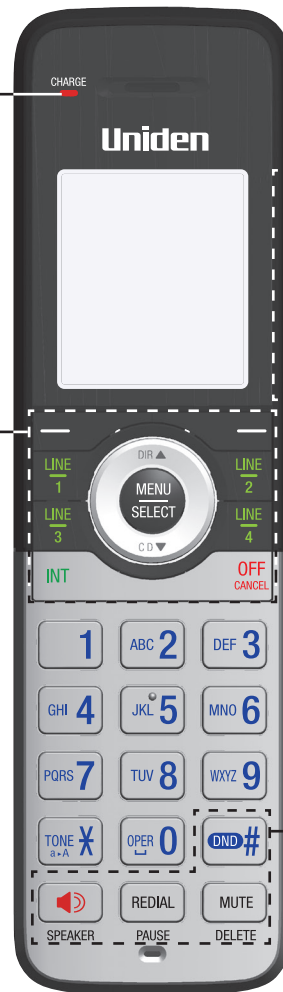

-/VOLUME/+

- During a call, press to adjust the listening volume.
- Press to adjust the ringer volume when in idle mode.

PAGE

- Press to begin a one-to-one or one-to-group broadcast.

DND (Do not disturb)

- In idle mode, **press and hold** to turn the feature on. **Press and hold** again to turn off.

▶/SPEAKER

- Press to turn on the handset speakerphone. Press again to resume normal handset use.
- The indicator is on when the speakerphone is in use.

REDIAL/PAUSE

- Press to view the last 10 numbers dialed.

MUTE/DELETE

- During a call, press to mute the microphone.
- While predialing, press to delete digits.
- While reviewing the directory entry, press to delete an individual entry.
- While entering or editing a directory entry, press to erase a digit or character. **Press and hold** to erase all digits or characters.

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquid, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- Do not open this product except as directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- This power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, an under-the-table or cabinet outlet.
- For **PLUGGABLE EQUIPMENT**, the socket-outlet shall be installed near the equipment and shall be easily accessible.



Caution:

- Use only the power adapter provided with this product.
- Use only the supplied rechargeable battery.
- To prevent risk of fire or battery explosion, replace with the correct battery type. Dispose of used batteries according to the instructions.

SAVE THESE INSTRUCTIONS

Technical specifications

RF frequency band	1881.792 - 1897.344MHz
Channels	5
Charger voltage	100 - 240Vrms
(AC voltage, 50/60Hz)	
Charger voltage	6VDC @ 450mA
(AC adaptor output)	
Battery pack	2.4V 400mAh Ni-MH battery pack
Headset jack	2.5mm, 32-150ohm
EU Adaptor	VT05EEU06045
	Input 100-240V AC 50/60Hz 150mA,
	Output 6VDC 450mA
UK Adaptor	VT05EUK06045
	Input 100-240V AC 50/60Hz 150mA,
	Output 6VDC 450mA

ustelecom | 美国通讯有限公司
保養說明

PRODUCTS - WARRANTY CARD
CUSTOMER'S COPY 用戶存根 / 不需剪貼

產品保養證

Name: _____

電話: _____

Tel: _____

Model: _____

零售商: _____

Dealer: _____

購買日期: _____

Date of Purchase: _____

機身編號: _____

Serial No.: _____

辦公時間

星期一至五: (公眾假期除外)

上午十時至下午十二時 / 下午二時至五時

Office Hours

Mon - Fri (Except for Public Holidays)

10:00 am - 12:00 am; 2:00 pm - 5:00 pm

維修中心: SERVICE CENTRE

Unit 307, 3/F, Vantia Industrial Centre,

21-23 Tai Lin Pui Road, Kwai Hong, N.T.

TEL: (852) 2185 6283; Whatsapp: (852) 65720122

保養條款

- 此保養證有效日期為購買日期起計12個月。
- 此保養證只適用於由本公司製造之產品及全線產品。不可轉讓。
- 保養證僅限於原裝產品內。請出示保養證、發票正本及全線產品一併交回。客戶須將產品送回本公司修理。
- 零件及配件(人工、電線及零件)之維修為購買後90天。包括對電話線路及電話機組之維修。
- 保養證不適用於下列情況及所導致之損壞: (a) 產品被修改、修改及非本公司所製造; (b) 不當使用; (c) 意外損壞; (d) 意外、過熱、雷電、雷暴、火災; (e) 誤用、濫用、修改、汙染、水浸、過度濕氣及腐蝕; (f) 使用其他品牌之配件。
- 此保養證不適用於: (a) 產品被修改、修改及非本公司所製造; (b) 不當使用; (c) 意外損壞; (d) 意外、過熱、雷電、雷暴、火災; (e) 誤用、濫用、修改、汙染、水浸、過度濕氣及腐蝕; (f) 使用其他品牌之配件。
- 由通知之日起計3個月內沒有維修已獲修好, 公司可自行選擇有權轉作、過期失換、恕不負責。
- 本公司保留隨時修改保養條款, 恕不另行通知。

Warranty Conditions

- This warranty commences on the date of original purchase and expires 12 months from that date.
- This warranty extends only to the first consumer purchaser and is not transferable.
- Warranty is only provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with the warranty card and the original purchase invoice.
- The warranty period for accessories (battery, charger, line cord) is 90 days commencing from date of original purchase. Calls/batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that look are covered.
- The warranty does not cover defects or damage result from (a) modification, alteration or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt, extreme humidity or heat, heavy precipitation; (e) the use of other brand accessories.
- Any repaired items not covered by customers within 2 months from the date of notice will be disposed of at the discretion of the company.
- The warranty conditions are subject to change by the company without giving prior notice to customer.

18.COM Electronics Pte Ltd.
CUSTOMER'S COPY: DO NOT MAIL THIS

WARRANTY CARD

Name: _____

Contact No. Tel: _____

Model: _____

Date Of Purchase: _____

Serial No.: _____

Dealer's Stamp: _____

Service Centre:

Monday - Friday Opening Hours

9:30am - 12:30pm, 2:00pm - 5:00pm

Tel: 6278 8274

- This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
- Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
- This warranty is invalid if the product has been modified, altered and/or repaired by persons other than technician of our company or mishandled by customer.
- This warranty is applicable to Singapore only.
- This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
- Customers are requested to collect repaired unit within two months from date of submission. Units not collected after 6 months will be disposed off by the company.

18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtech Building, #04-01, Singapore 575625

Complies with IDA Standard DB101622.
 Distributor:
 US Telecom Limited
 info@ustel.com.hk
 www.ustel.com.hk